



ABT-B

BUFFER TANK

 AUTONOM

ABT-B BUFFER TANK



A buffer tank (also called a buffer vessel) is used to store thermal energy, generally hot water or a water/glycol mixture.


It is used to ensure a constant supply of heat, but also to optimize the efficiency of a boiler, a geothermal system or heat pump.

FEATURES


Volume	From 300 to 4 000 L 79 to 1 057 US gal
Max operating temperature	95 °C 203 °F
Max operating pressure	85 psi (not ASME certified)
Tank construction	High-corrosion-resistant steel

Isolation	Compliant with <i>EN 15332 Energy Efficiency</i> standard
300 to 451 L 79 to 119 US gal	Rigid water-based PU type insulation, 42 kg/m ³ (HCFC-free)
800 to 4 000 L 211 to 1 057 US gal	Flexible PU type insulation, 18 kg/m ³

Exterior finish	
300 to 4 000 L 79 to 1 057 US gal	Artificial leather, IXPE and ABS

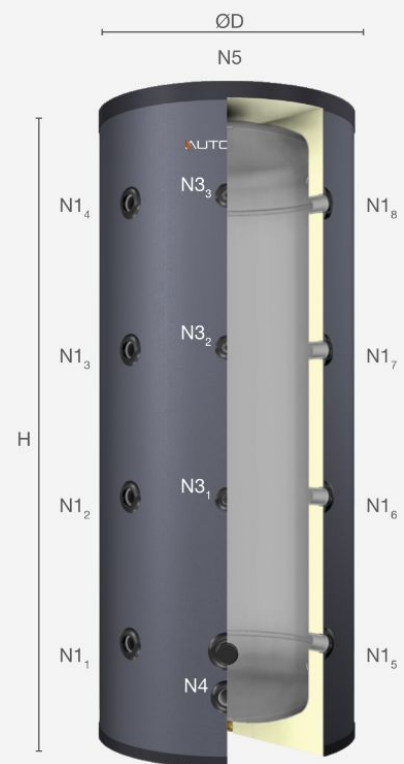

INSTALLATION DIAGRAM

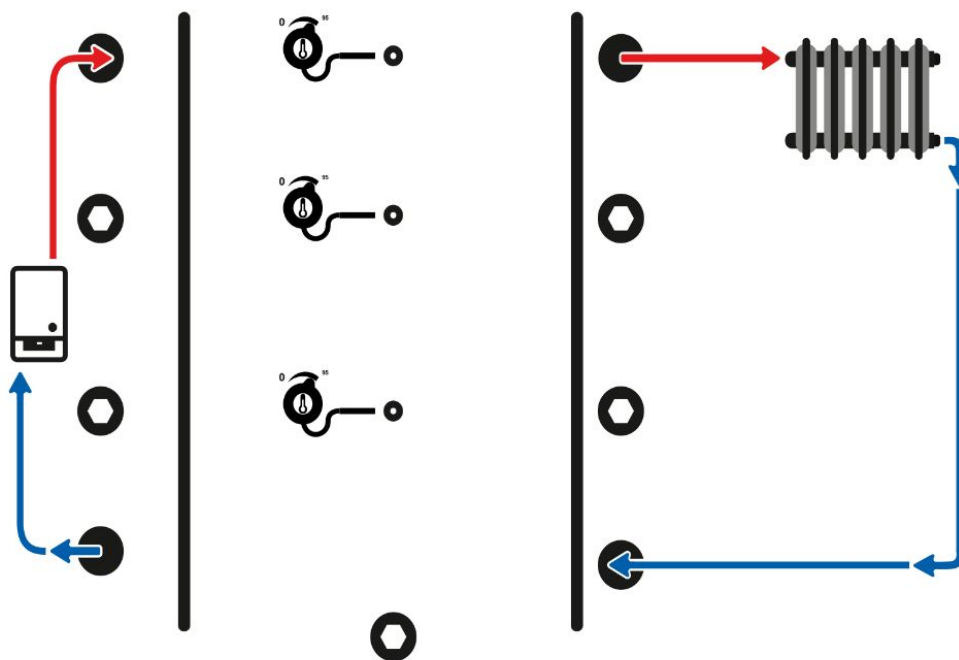

This installation diagram is for reference only. Follow all applicable standards when installing.

SPECIFICATIONS

			ABT-B MODEL									
	CODE	UNIT	300	400	450	800	1000	1500	2000	2500	3000	4000
Volume	V	L	300	400	451	800	1000	1500	2000	2500	3000	4000
Diameter	∅D	mm	700	750	700	900	1000	1120	1310	1460	1460	1660
Height	H	mm	1210	1450	1820	2100	2070	2300	2280	2160	2580	2515
Heating connection	N1	in	1 1/4	1 1/4	1 1/4	1 1/2	1 1/2	1 1/2	1 1/2	2	2	3
Air vent fitting	N5	in	1 1/4	1 1/4	1 1/4	1 1/4	1 1/4	1 1/4	1 1/4	1 1/4	1 1/4	1 1/4
Insulation	t -	mm	PU/50	PU/50	PU/50	PU/50	PU/50	PU/50	PU/80	PU/80	PU/80	PU/80
Weight (gross)	G	kg	70	106	106	183	197	286	360	510	563	745
Tipping height	-	mm	1420	1650	1970	2300	2320	2580	2580	2610	2965	3065
Thermometer fitting	N3	in	1/2	1/2	1/2	1/2	1/2	1/2	1/2	1/2	1/2	1/2
Drain fitting	N4	in	1 1/4	1 1/4	1 1/4	1 1/2	1 1/2	1 1/2	1 1/2	2	2	3

Autonom reserves the right to modify technical information without prior notice. The information and diagrams provided may not be copied or used without Autonom's permission. If used, Autonom assumes no responsibility.



LES CHAUDIÈRES AUTONOM / AUTONOM BOILERS

670, avenue J-A Doyon Saint-Joseph-de-Beauce (Québec) G0S 2V0

 www.autonomboilers.com  info@autonomboilers.com

 +1 418-397-4300

